


2x4 WOOD MEMBER SUSPENSION METHOD.
 ATTACHED TO EXISTING SLAB WITH HARDENED
 NAIL. SUSPEND CHANNEL WITH
 WIRE TIE FROM REBAR CLIPS.

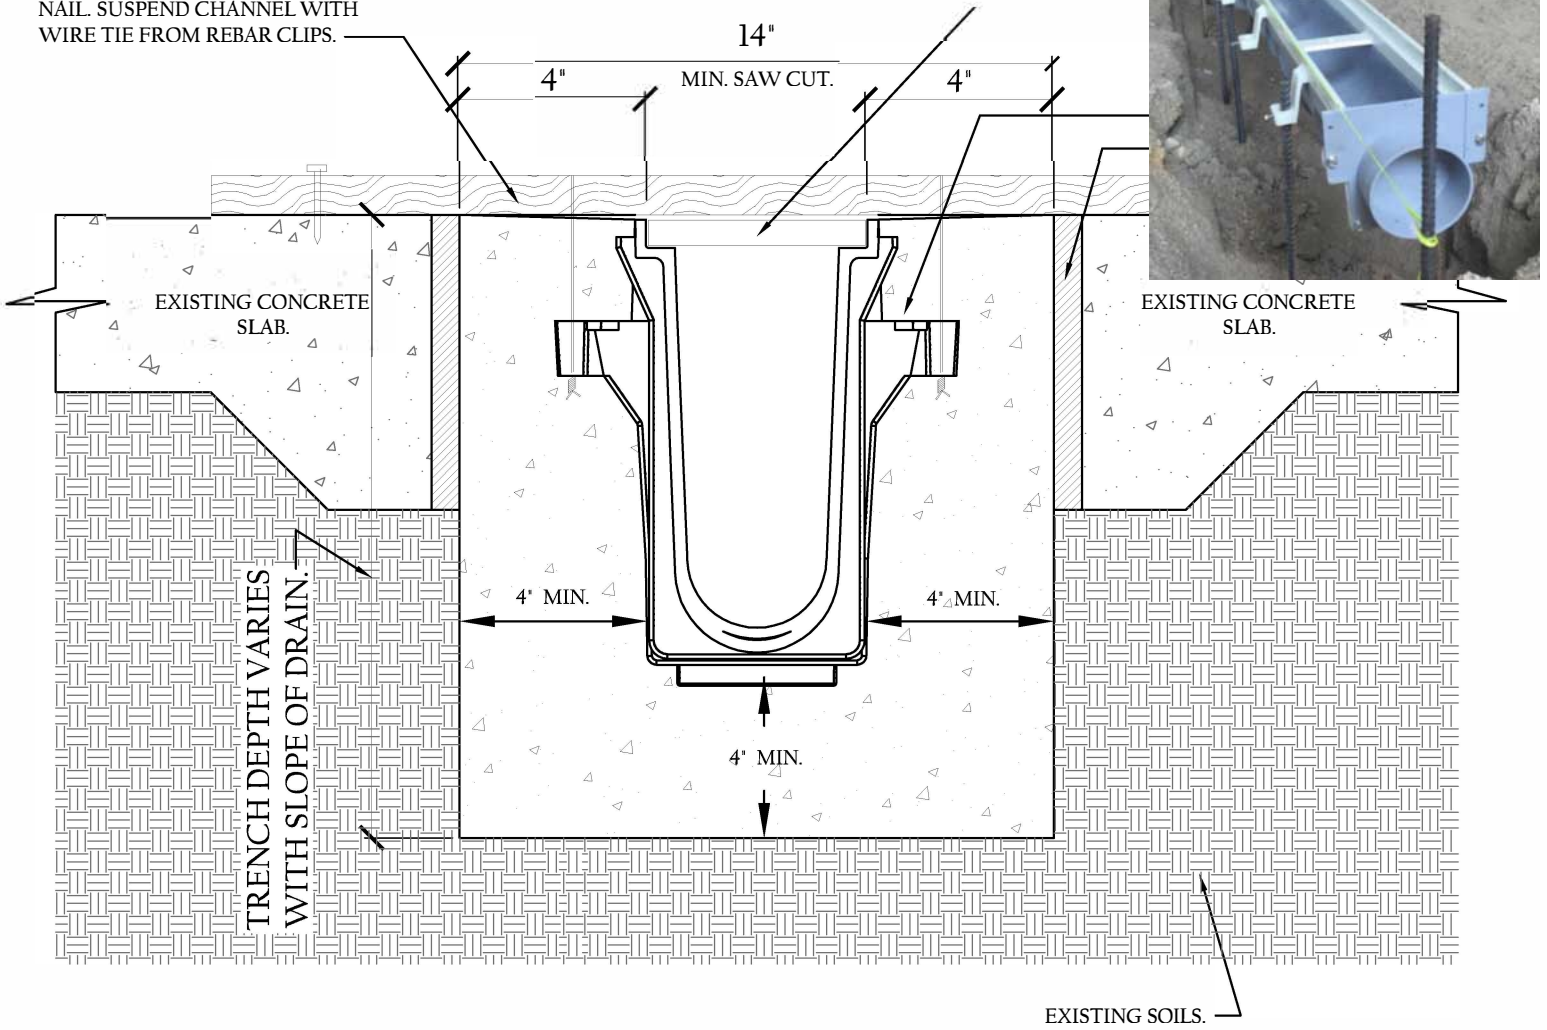

NOTE:

CHANNELS TO BE INSTALLED WITH BLANK GRATE. GRATE
 TO BE PROTECTED FROM CONCRETE POUR
 (COVER HOLES WITH TAPE).

SET TRENCH DRAIN IN CHANNEL SURROUNDED BY 4" OF CONCRETE OR
 THICKNESS OF THE CONCRETE SLAB WITH A MINIMUM OF 2,500 P.S.I.
 AVOID FULL LOAD TRAFFIC FOR 28 DAYS OR UNTIL CONCRETE HAS
 COMPLETELY HARDENED.

TYPICAL INSTALLATION